


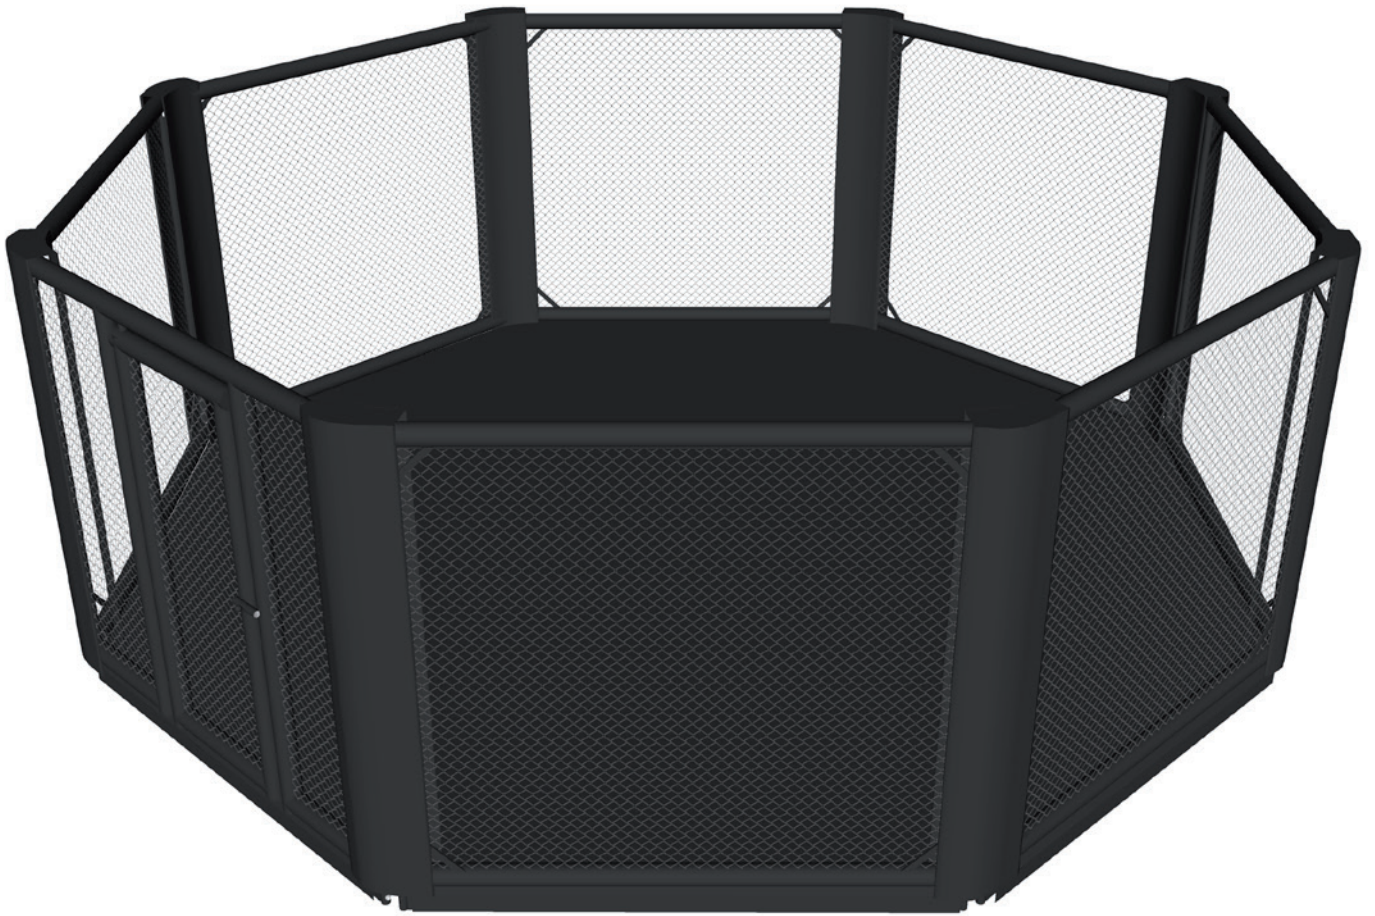



TOP TEN

MMA CAGE




Assembly Plan

1 Steel frame

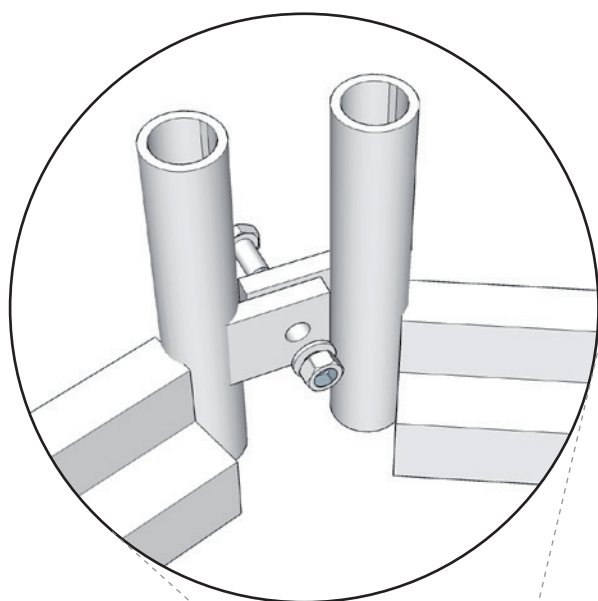
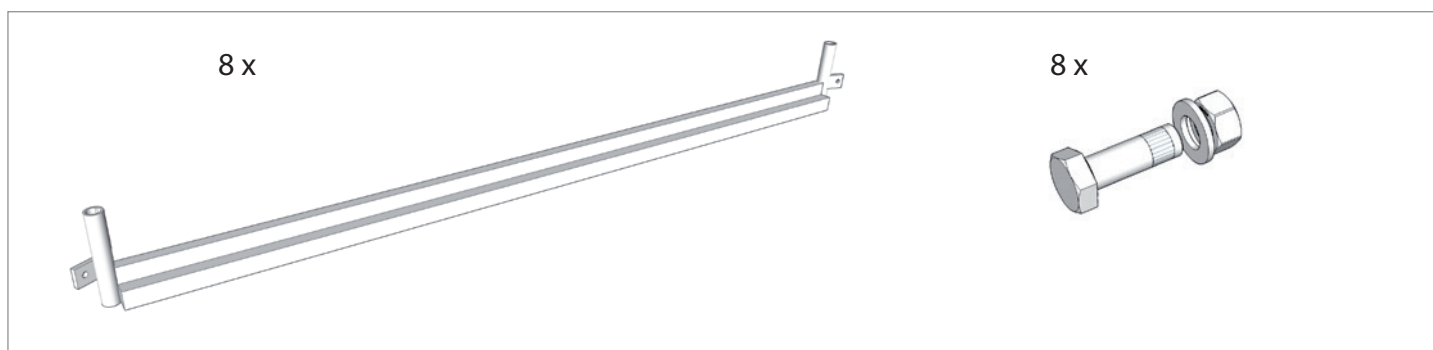


Lay down the 8 parts of the base and make a regular octagon. Use bolts (screws) to attach all the parts together. Make sure that the „A“ and „B“ lengths are the same.


WARNING: DO NOT tighten the bolts in this assembly phase.

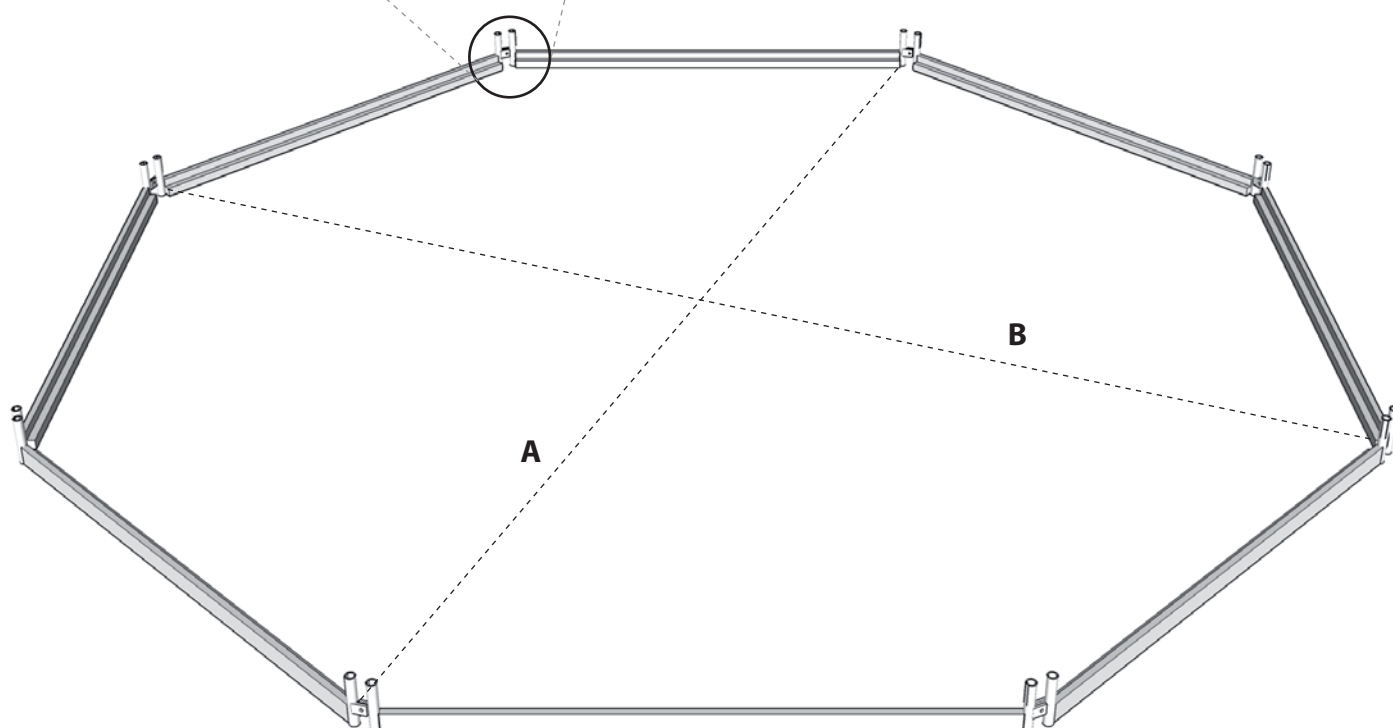



2 3 layer floor

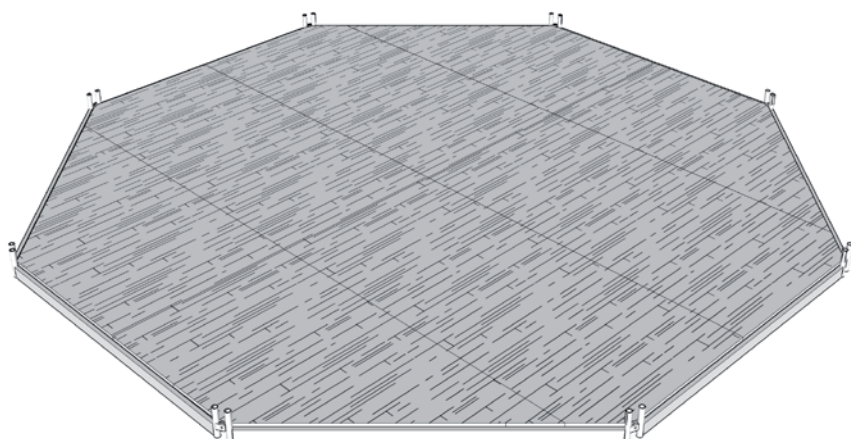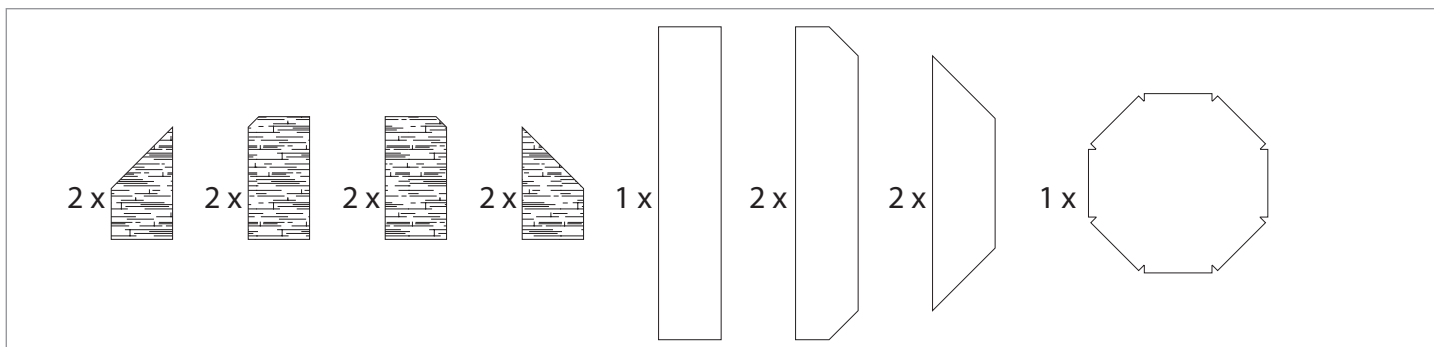


Lay the OSB boards inside the steel frame as shown on the picture. After creating a regular octagon tighten the bolts (screws).

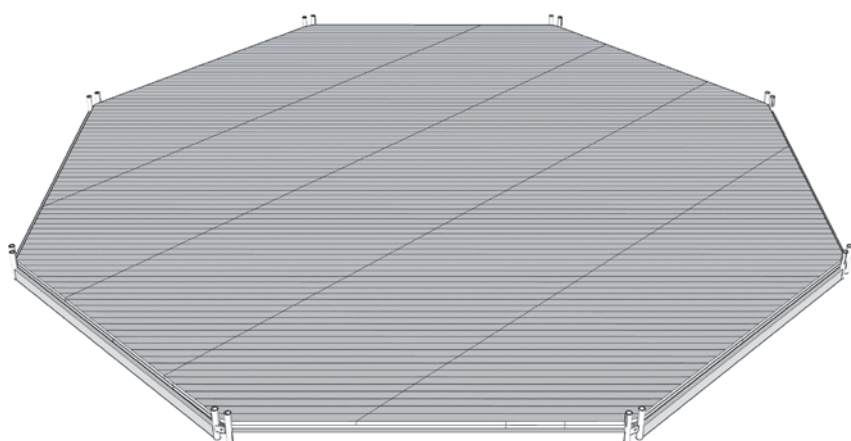

Once the boards and the steel frame are tighten and well straighten, lay the soft mats down as shown on the picture. Put the PVC cover sheet on the soft mats, and attach their velcro edges with the steel parts.

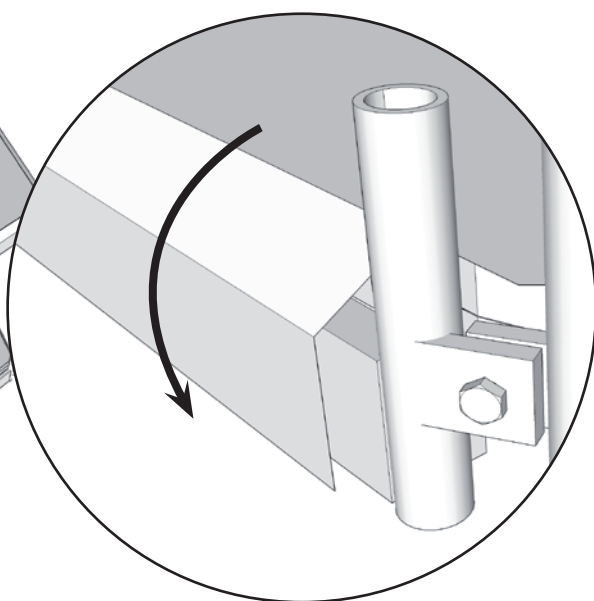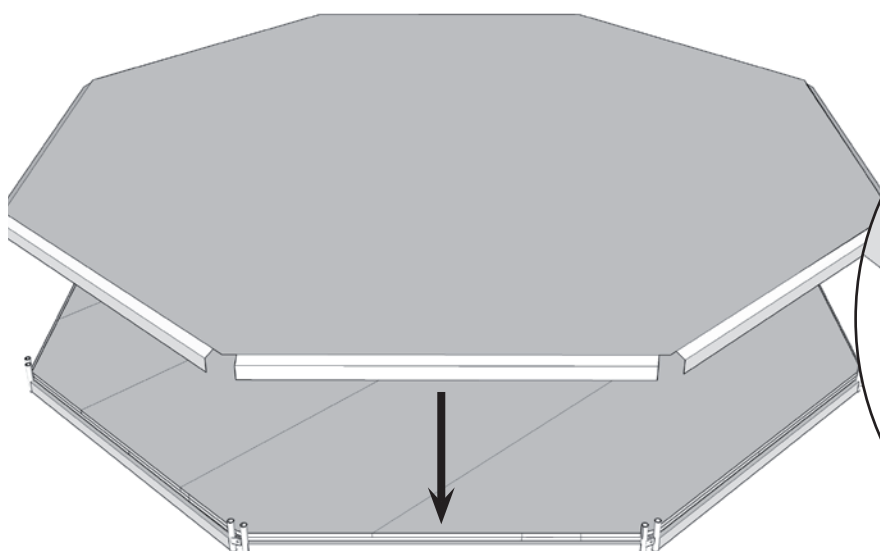


3 Fencing

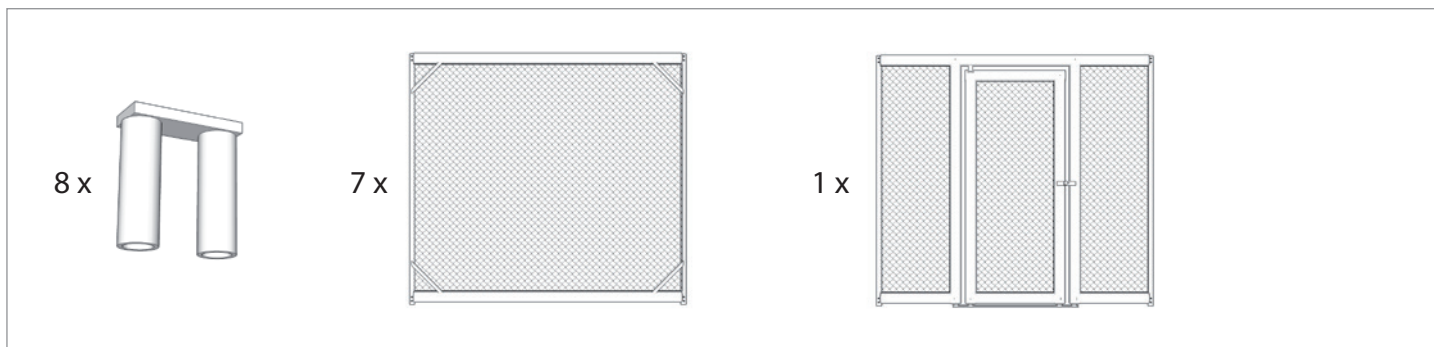

Put the fence parts on the frame as shown on the picture, and fix the fence parts at the top together with the junctions as shown in the picture.

WARNING: The corner brace indicates the outer side of the fence.


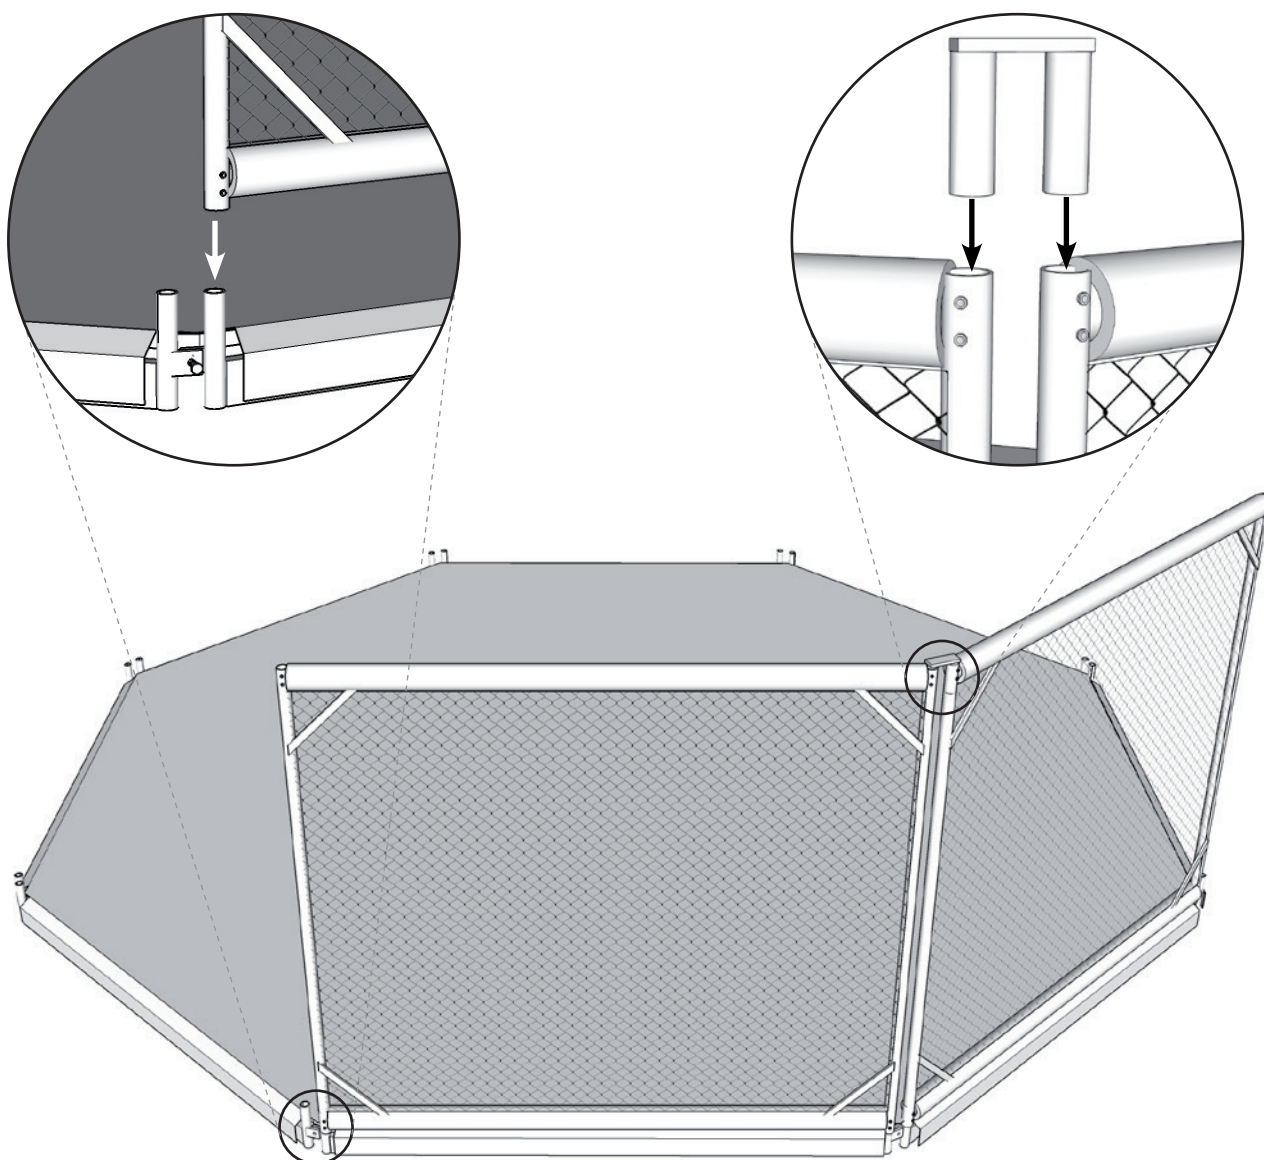


4 Corners

8 x



The padded corners are to be installed after the bolts (screws) are tightened properly. Attach the inside, and outside parts of the corners together with their velcros.

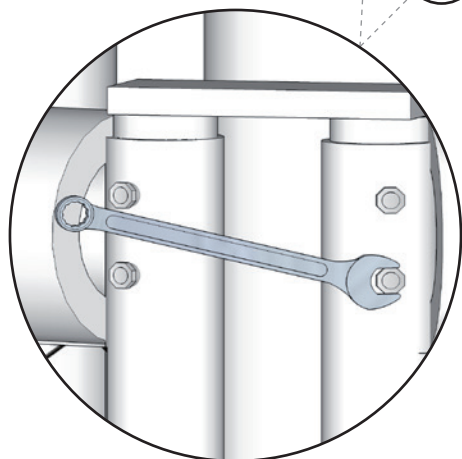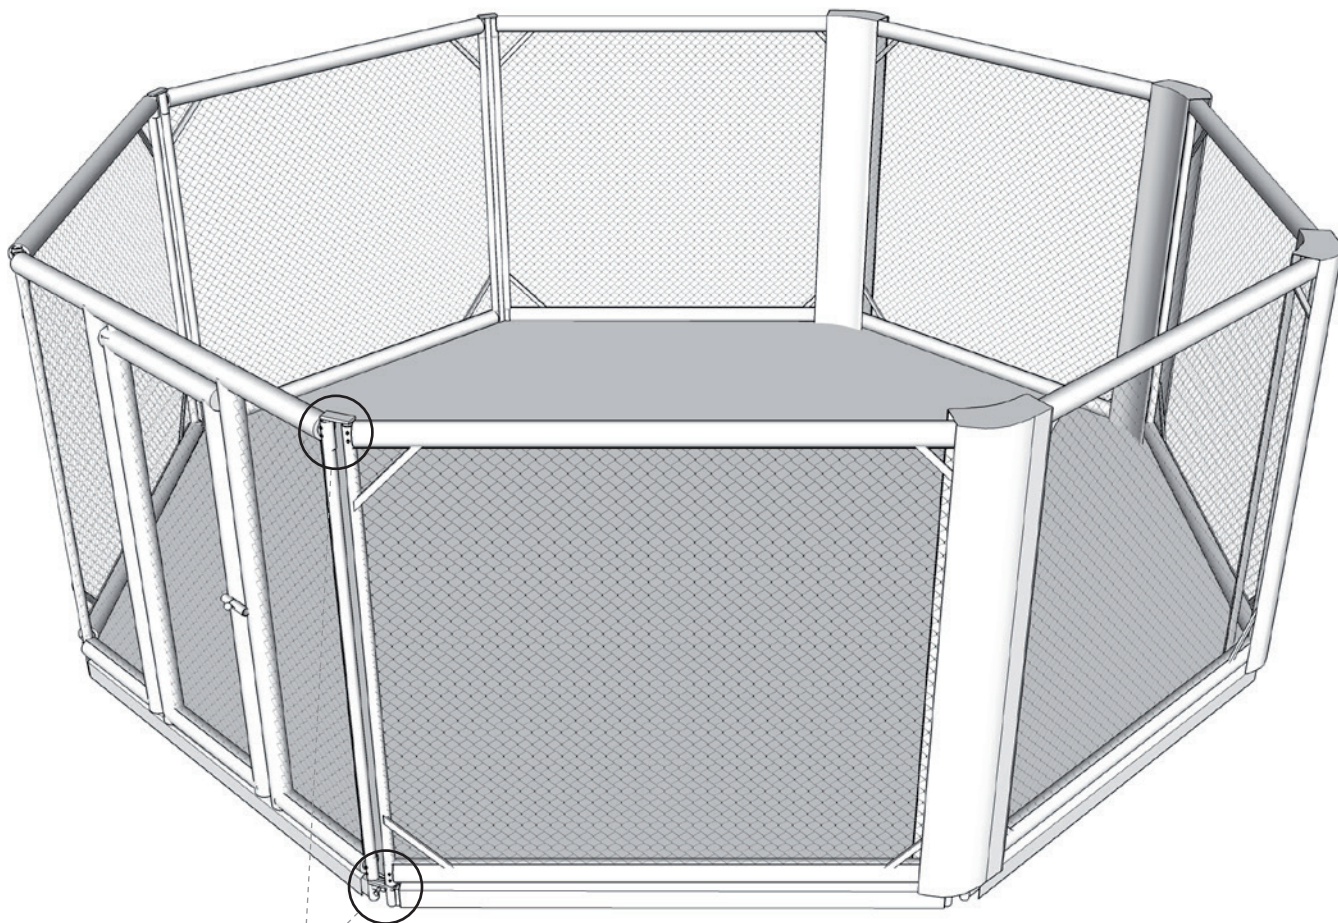



TOP TEN